




1. Peel backing from 'MULTI 2.75 ROCKET LAUNCHER BOLTS LOCATOR', and wrap around LAUNCHER TUBE aligning top and bottom rules. Trim tube to length of locator. Note difference in hole sizes on opposite sides.

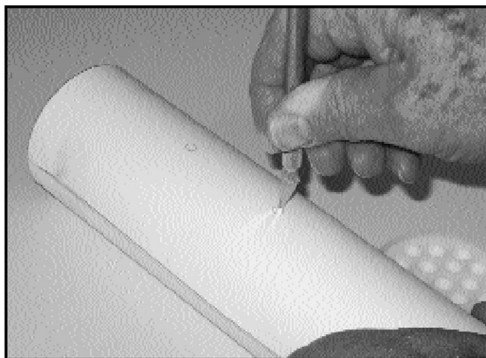


2. Using hobby knife cut hole in both sides of tube. DO NOT use a drill for this as it may tear the tube and leave a ragged hole.



3. Clean holes using a small round file.



4. Test fit the head of the socket head 4-40 bolt in the large holes and the shank end in the small holes - neither should be a tight fit. Remove 'MULTI 2.75 ROCKET LAUNCHER BOLTS LOCATOR' sheet.

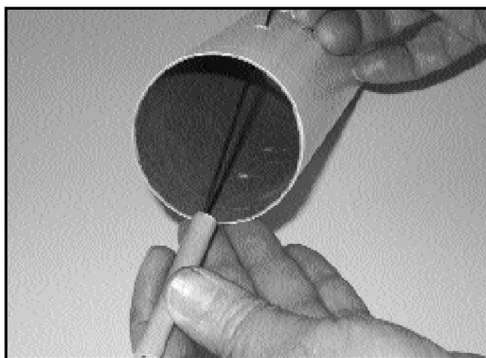


5. Locate the WOODEN SUPPORTS and note the hole sizes of each end. Run a 1/16th wire through the large hole of the LAUNCHER TUBE and into the large hole of the support. Square up the SUPPORT inside the tube until the wire can run through the small hole in the LAUNCHER TUBE.




6. Using a small round file align the WOODEN SUPPORT with the small hole in the LAUNCHER TUBE. Using a sharpened pencil align the large hole of the WOODEN SUPPORT with the large hole of the LAUNCHER TUBE. When aligned apply CA glue to the inside of TUBE.




7. Repeat step 6 on other set of holes.

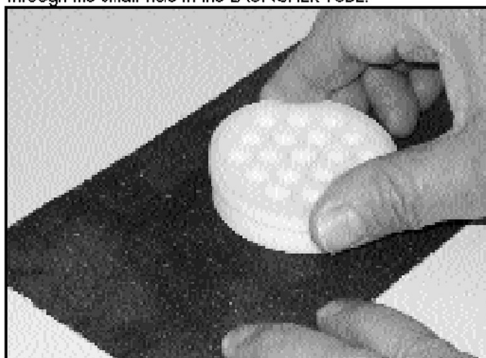


8. Using coarse emory cloth, sand paper or a bench sander smooth the back or inside of the cast resin parts. Use appropriate breathing protection when sanding.

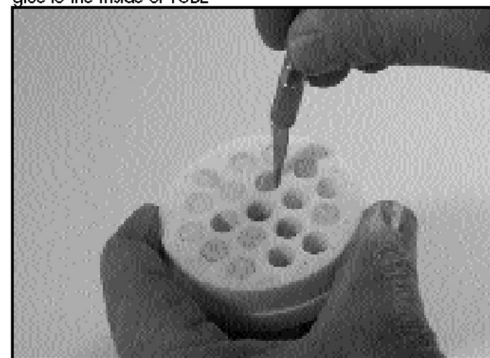


9. With a hobby knife remove any residue from inside of resin part.

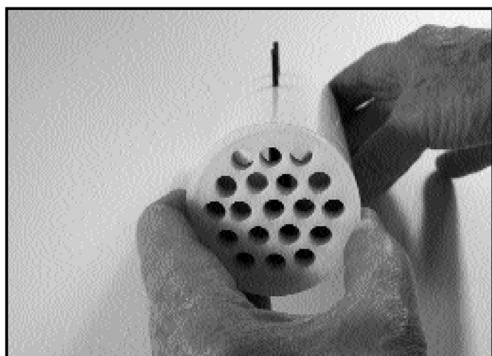

10. Fill any voids or bubbles in exposed resin parts and remove any casting imperfections and bond to LAUNCHER TUBE using CA glue. Align the three top holes perpendicular to the attaching cap screws as shown. NOTE: THE 'OPEN HOLES' END RESIN PIECE IS AT THE LONGER DISTANCE FROM THE MOUNTING BOLT. SEE PANEL 12

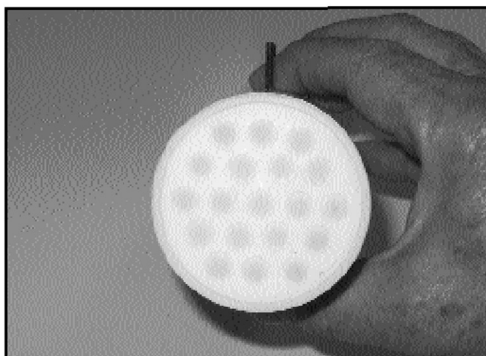

11. As in step 10, for the Rocket Nose end fill any voids or bubbles in exposed resin parts and remove any casting imperfections and bond to LAUNCHER TUBE using CA glue. Align the three top Rocket Noses perpendicular to the attaching cap screws as shown.

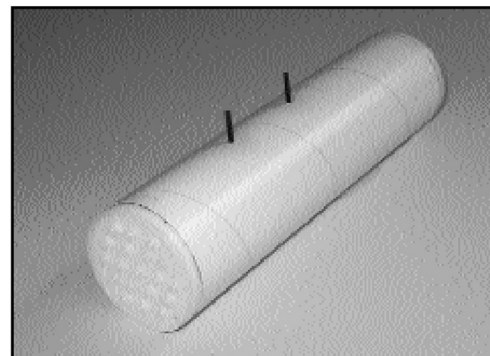

12. Using masking tape, mask off the expose threads of the mounting cap screws and prime paint the assembly with flat enamel primer. Sand to satisfaction and repeat primer coat. Sand and apply final paint. Flat "Modern Olive Drab"-FS#34087 recommended color.